


Rear Window Panel Trim Replacement

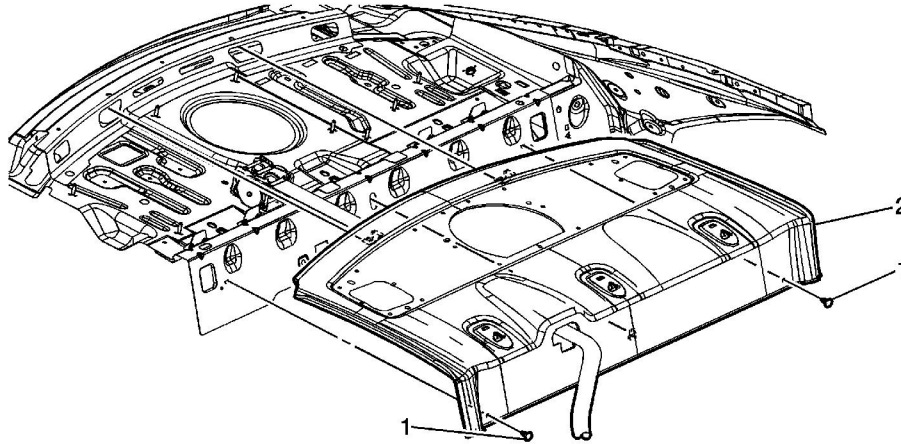

Callout	Component Name
<p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Disable SIR system. Refer to SIR Disabling and Enabling . 2. Remove rear quarter upper trim panel. Refer to Quarter Upper Trim Panel Replacement 3. Remove the rear seat back . Refer to Rear Seat Back Replacement . 	
1	Rear Window Trim Panel Retainer (Qty: 2)
2	<p>Rear Window Trim Panel Assembly</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Remove the center seat belt anchor bolt. 2. Route the center seat belt webbing, lower anchor bolt, bracket, buckle, and escutcheon through the trim.

