


Communication Interface Module Replacement

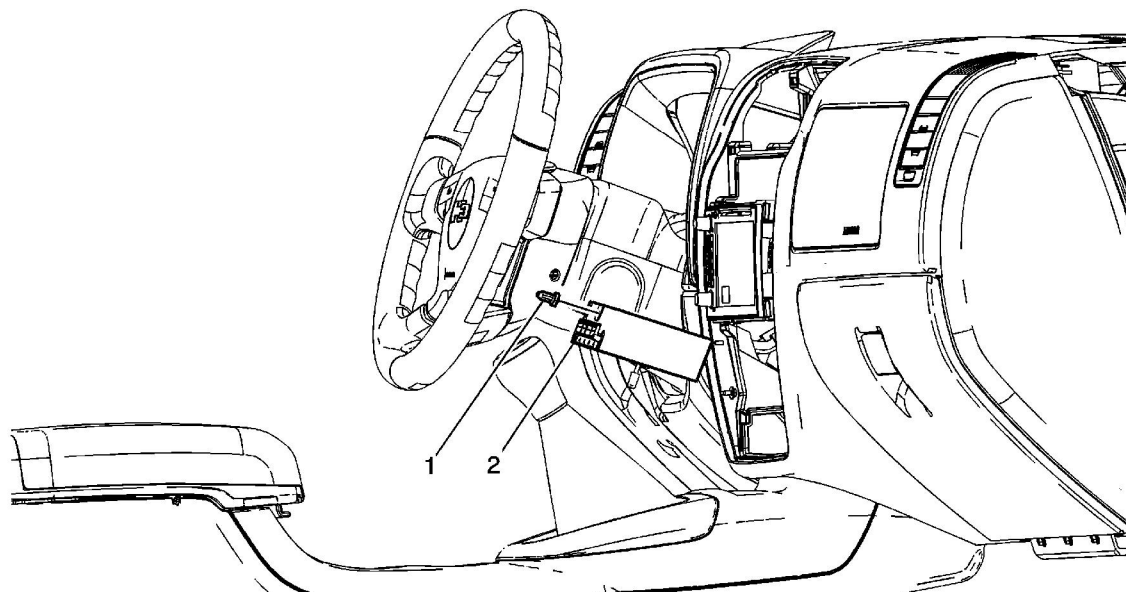

Callout	Component Name
<p>Preliminary Procedure</p> <p>Remove the instrument panel (I/P) center trim panel. Refer to Instrument Panel Center Trim Panel Replacement.</p>	
<p>1</p>	<p>Communication Interface Module Guide Pin</p> <p>Tip Turn counterclockwise to remove from the module in order to release the module from the bracket.</p>
<p>2</p>	<p>Communication Interface Module</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Disconnect the electrical connectors. 2. Tip the module towards the opening in the I/P to remove. 3. Reprogram the communications interface module if replacing the unit. Refer to Control Module References. 4. When replacing the communication interface module be sure to transfer the bluetooth antenna, if equipped.